## **XP95 IS**

## Galvanic Barrier





## 29600-098

XP95 IS Galvanic Barrier

The XP95 IS Galvanic Barrier is installed in the safe area and ensures system integrity.

· Enables compliance with the ATEX directive



